



SONY XR-1800

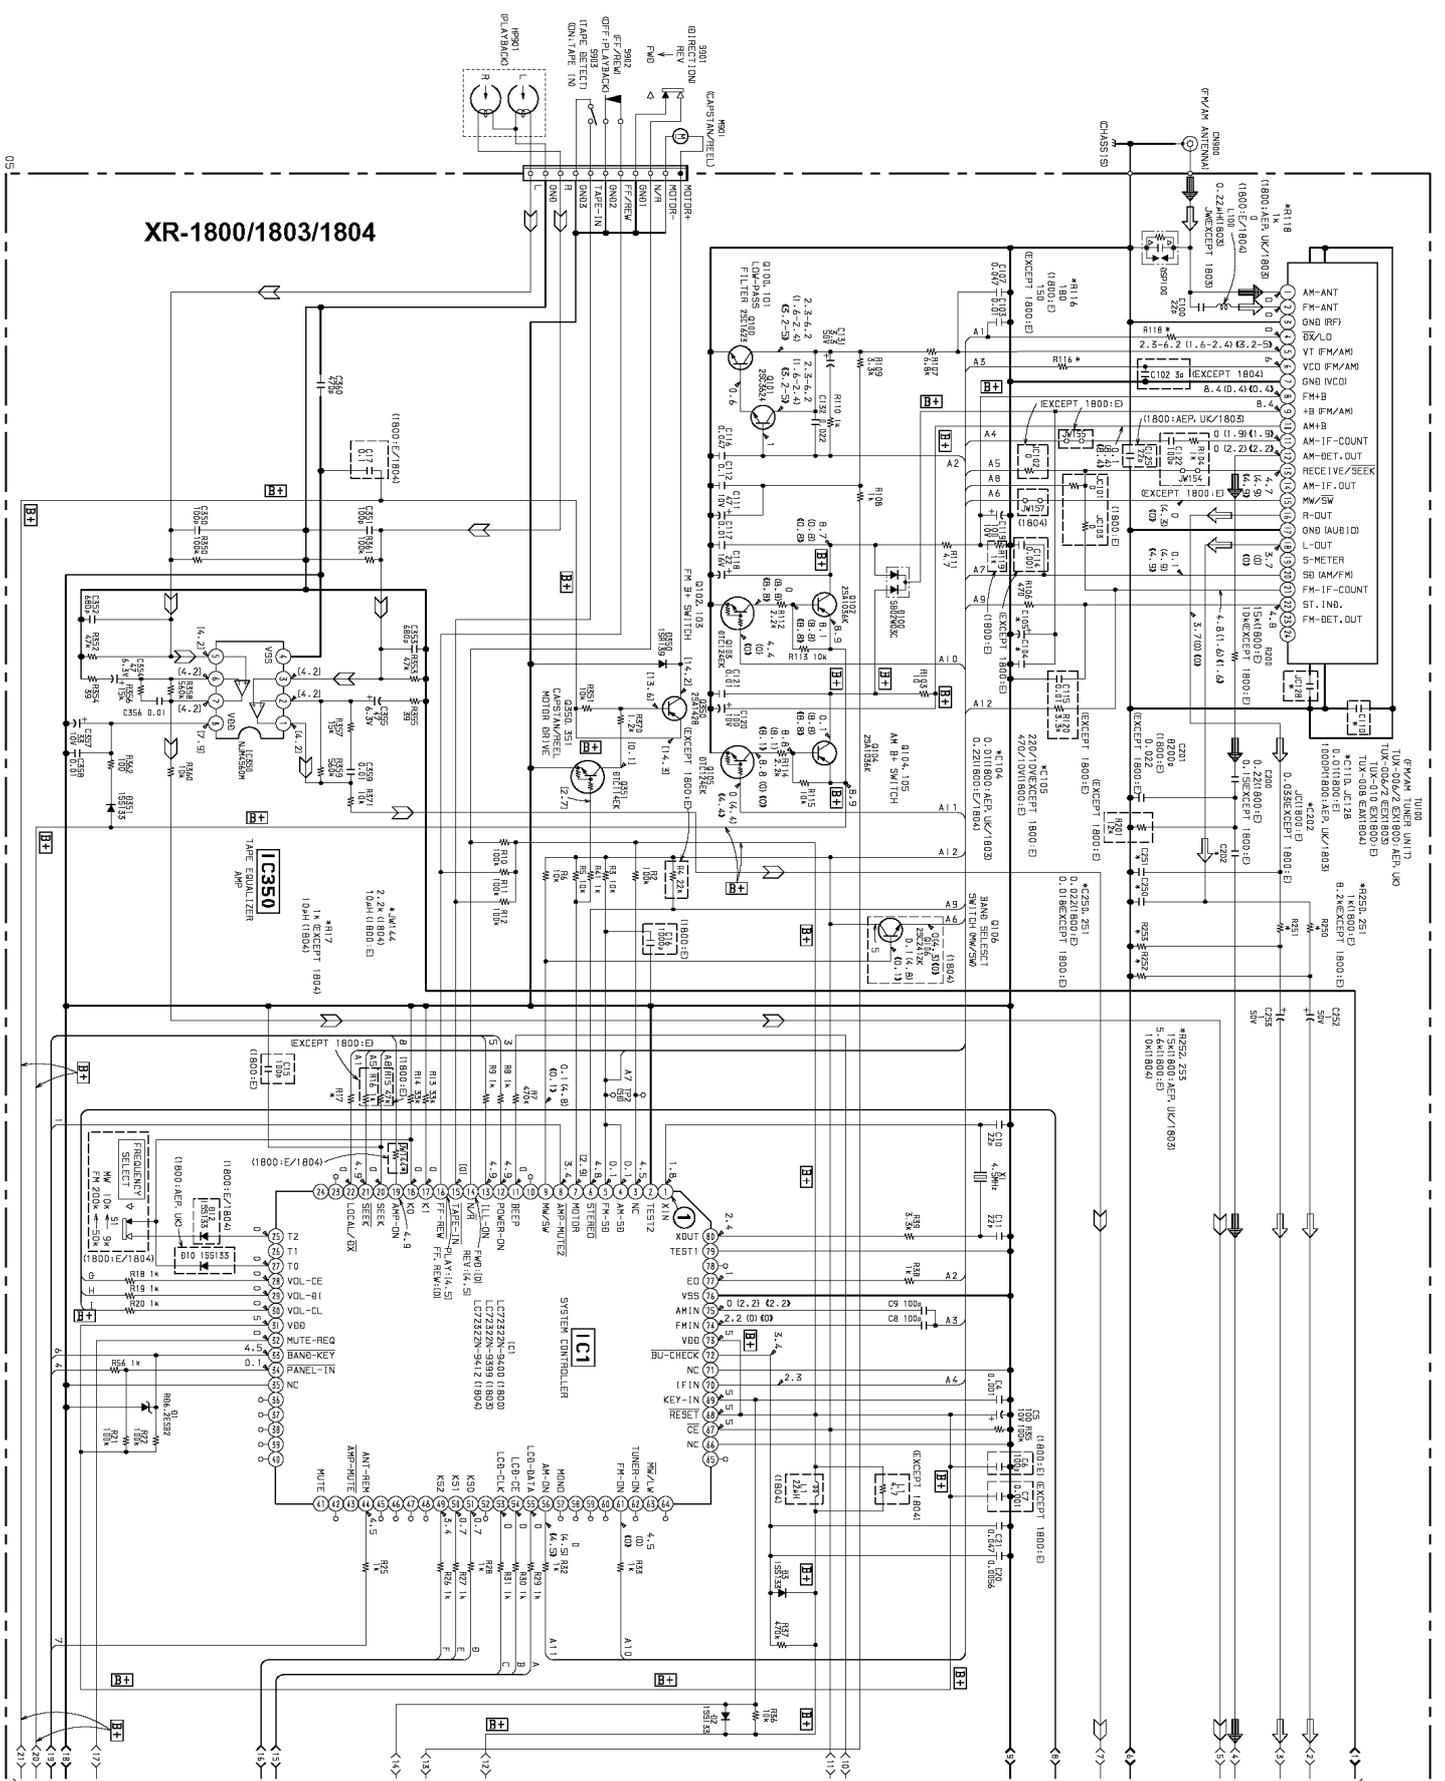

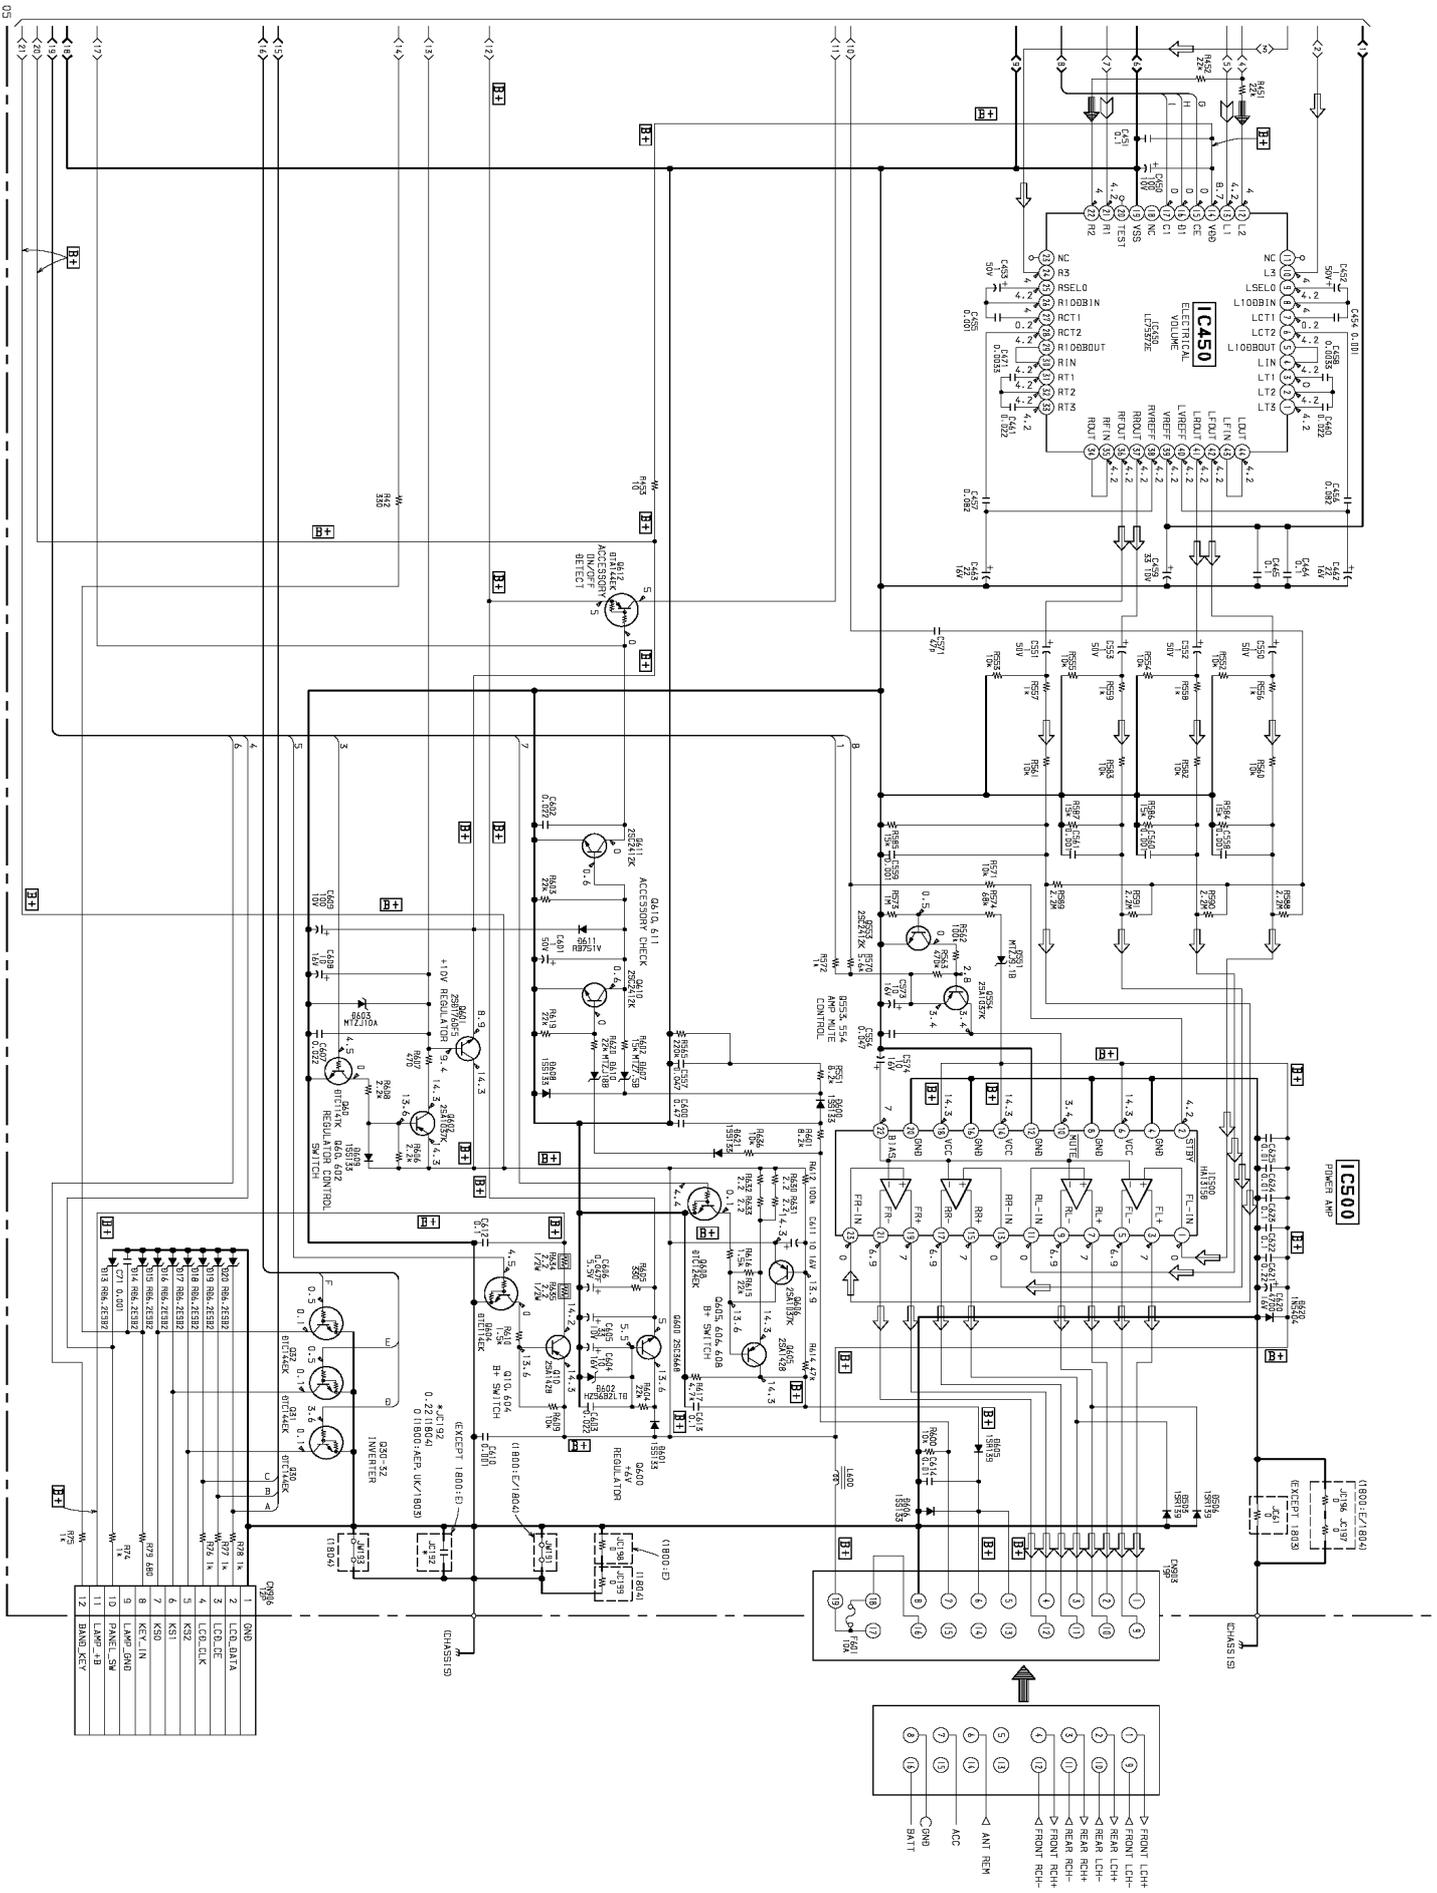

1	GND
2	FRONT LCH
3	FRONT RCH
4	REAR LCH
5	REAR RCH
6	FRONT LCH
7	FRONT RCH
8	ANT ENH
9	ACC
10	GND
11	DATA
12	BAND KEY

