


Схема подключения автосигнализации Prestige APS-600

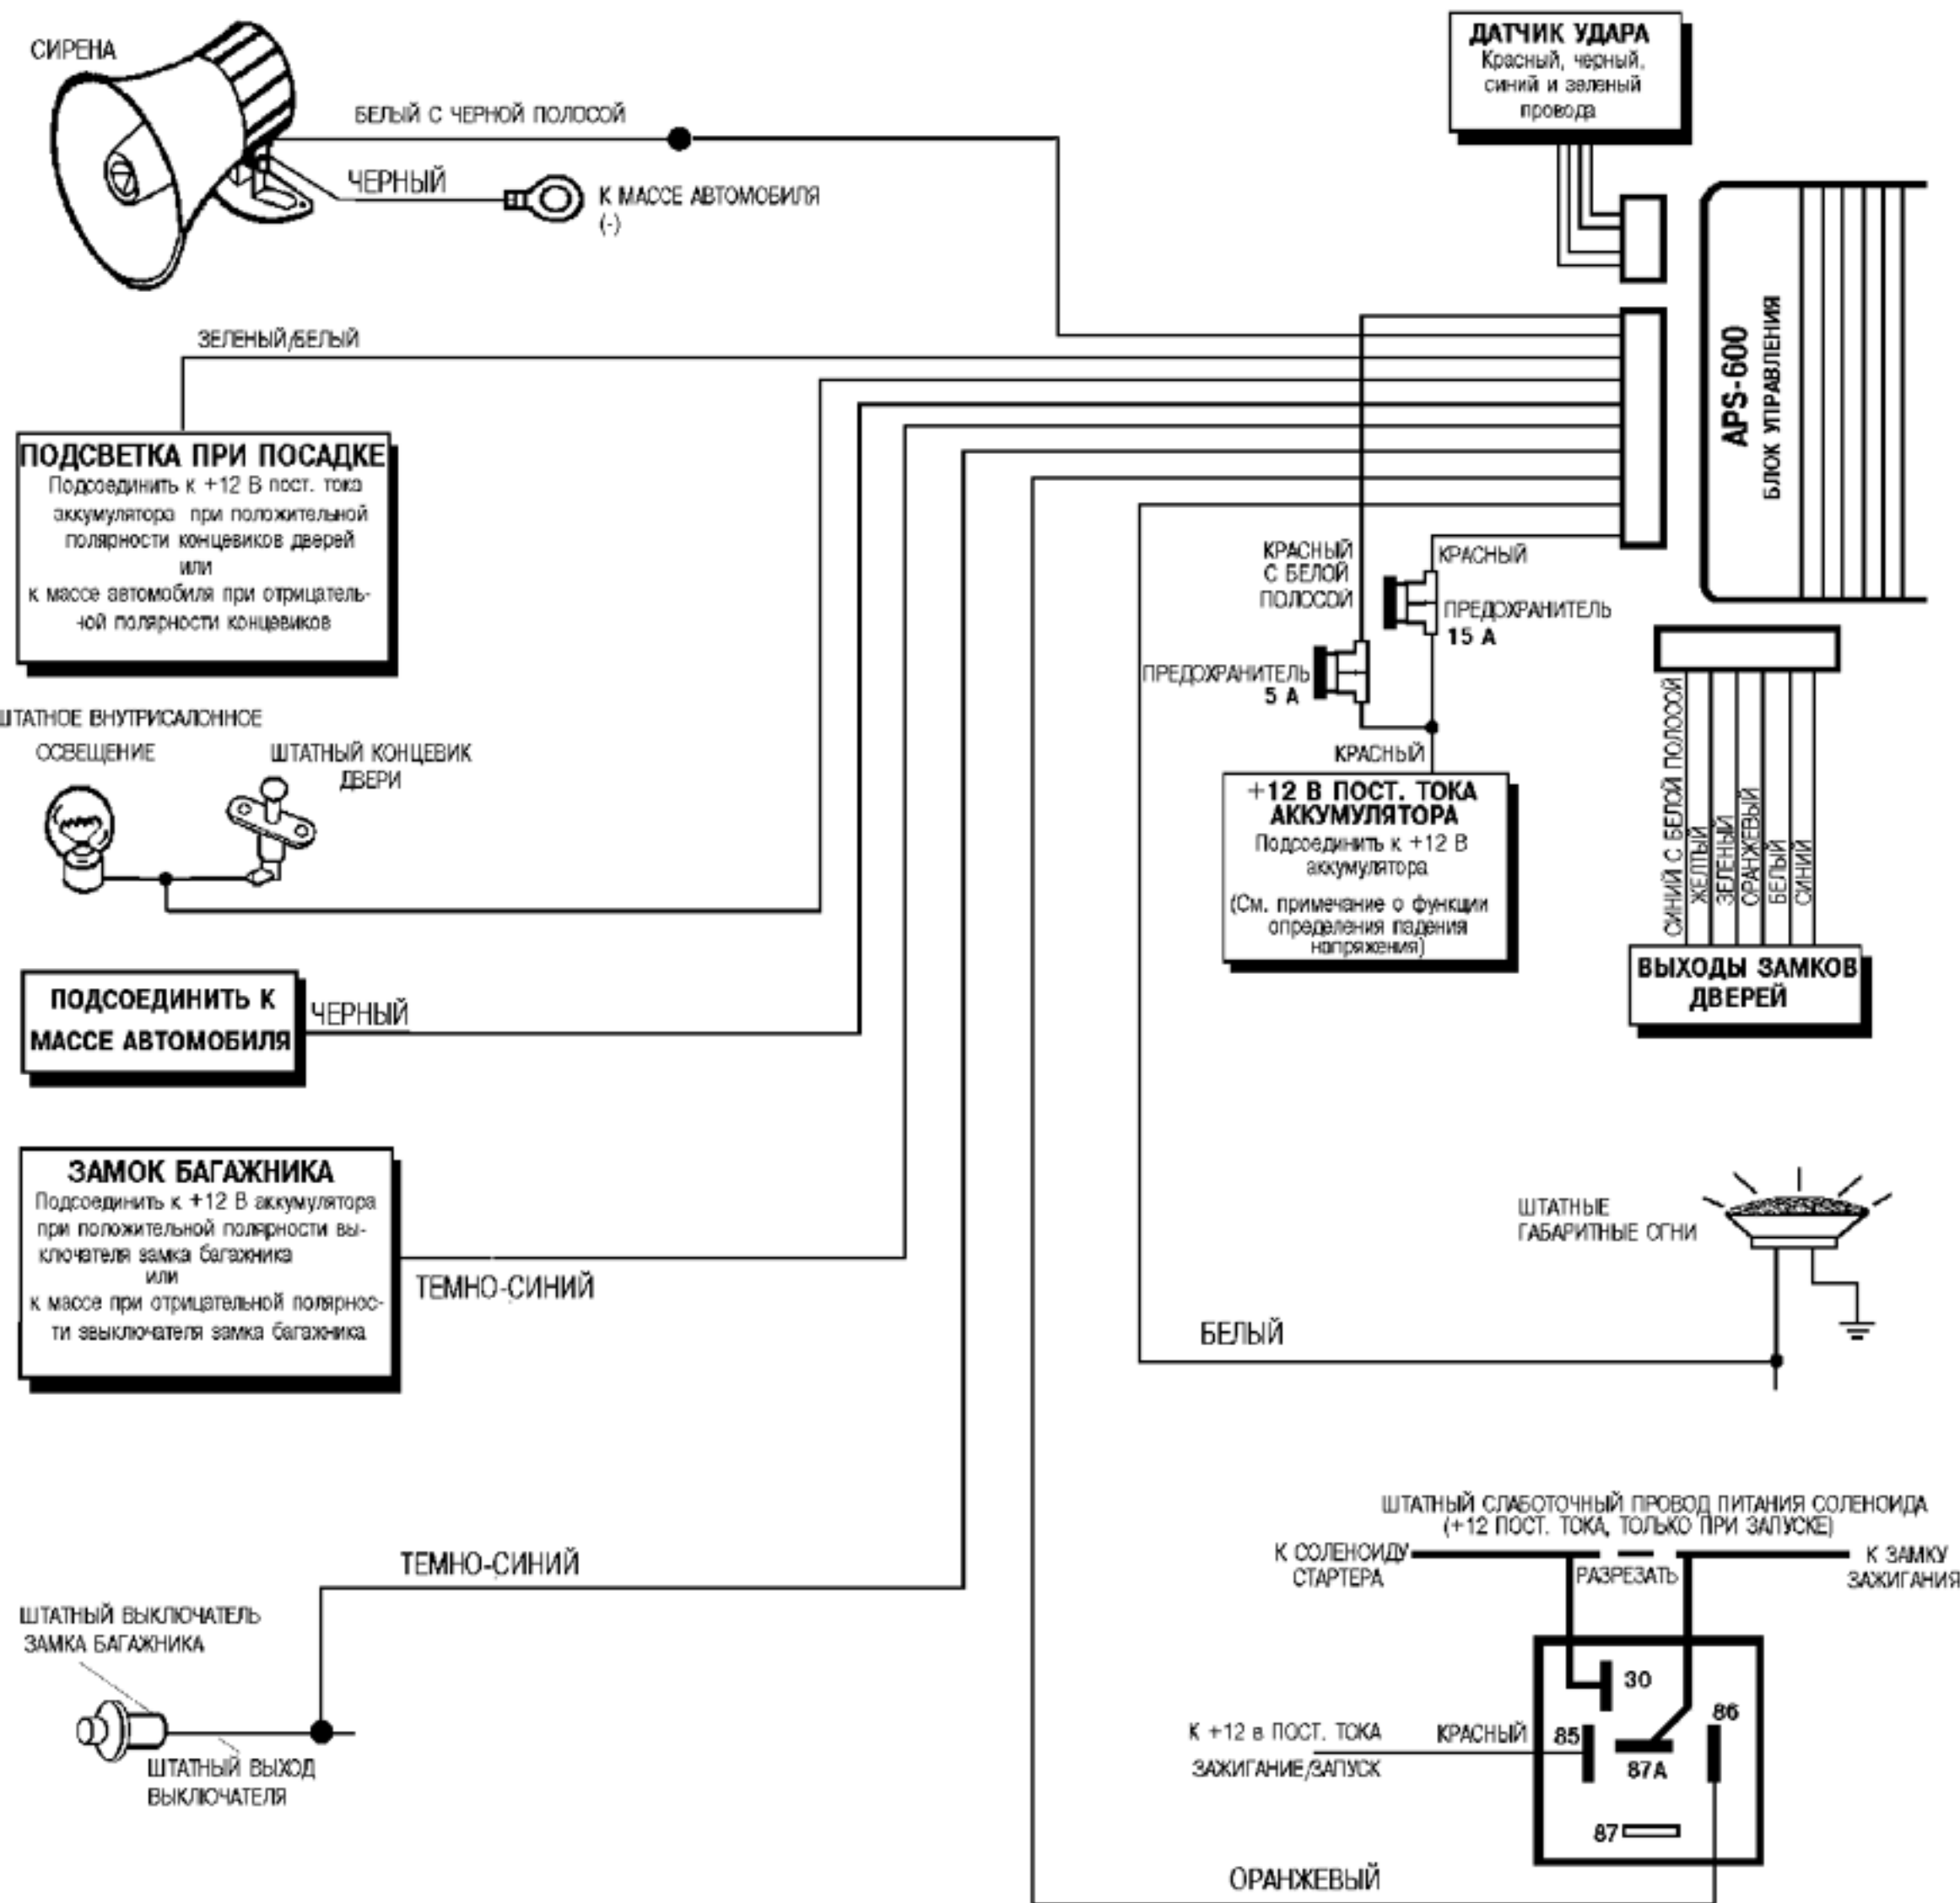

APS-600 CONTROL MODULE

CHANNEL 4
Negative Latching Output
for Optional Remote Start
or Window Roll-Up

LT. BLUE

CHANNEL 3
Negative Latching Output
for Optional Remote Start
or Window Roll-Up

GREEN w/BLACK

BLACK w/WHITE

HORN OUTPUT
Connect to Low Current Negative
Wire from Horn Switch

GROUND OUTPUT
when **DISARMED**
Connect To Relay For
Normally Opened Starter-
Cut Feature

ORANGE w/WHITE



HOOD OR TRUNK
PIN SWITCH

DARK GREEN

EXISTING
DOME LIGHT

EXISTING
NEGATIVE SWITCHING
DOOR PIN SWITCH (GM TYPE)



BROWN

EXISTING DOME LIGHT



PURPLE



YELLOW

IGNITION SOURCE
To +12 Volts
Ignition / Crank


HEADLIGHT OUTPUT
30 Second Ground Output
During Arm & Disarm
(Optional Relay Required)

WHITE w/BLUE

ZONE 1
Optional Negative Triggering
Alarm Accessories

LT. GREEN

RED

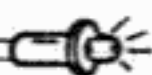

LT. BLUE

GREEN w/
BLACK

**2 STEP UNLOCK
RELAY OUTPUTS**
To Relay Terminal #85
To Relay Terminal #86

RED w/
BLACK

VALET SWITCH



GREY

BLACK