
 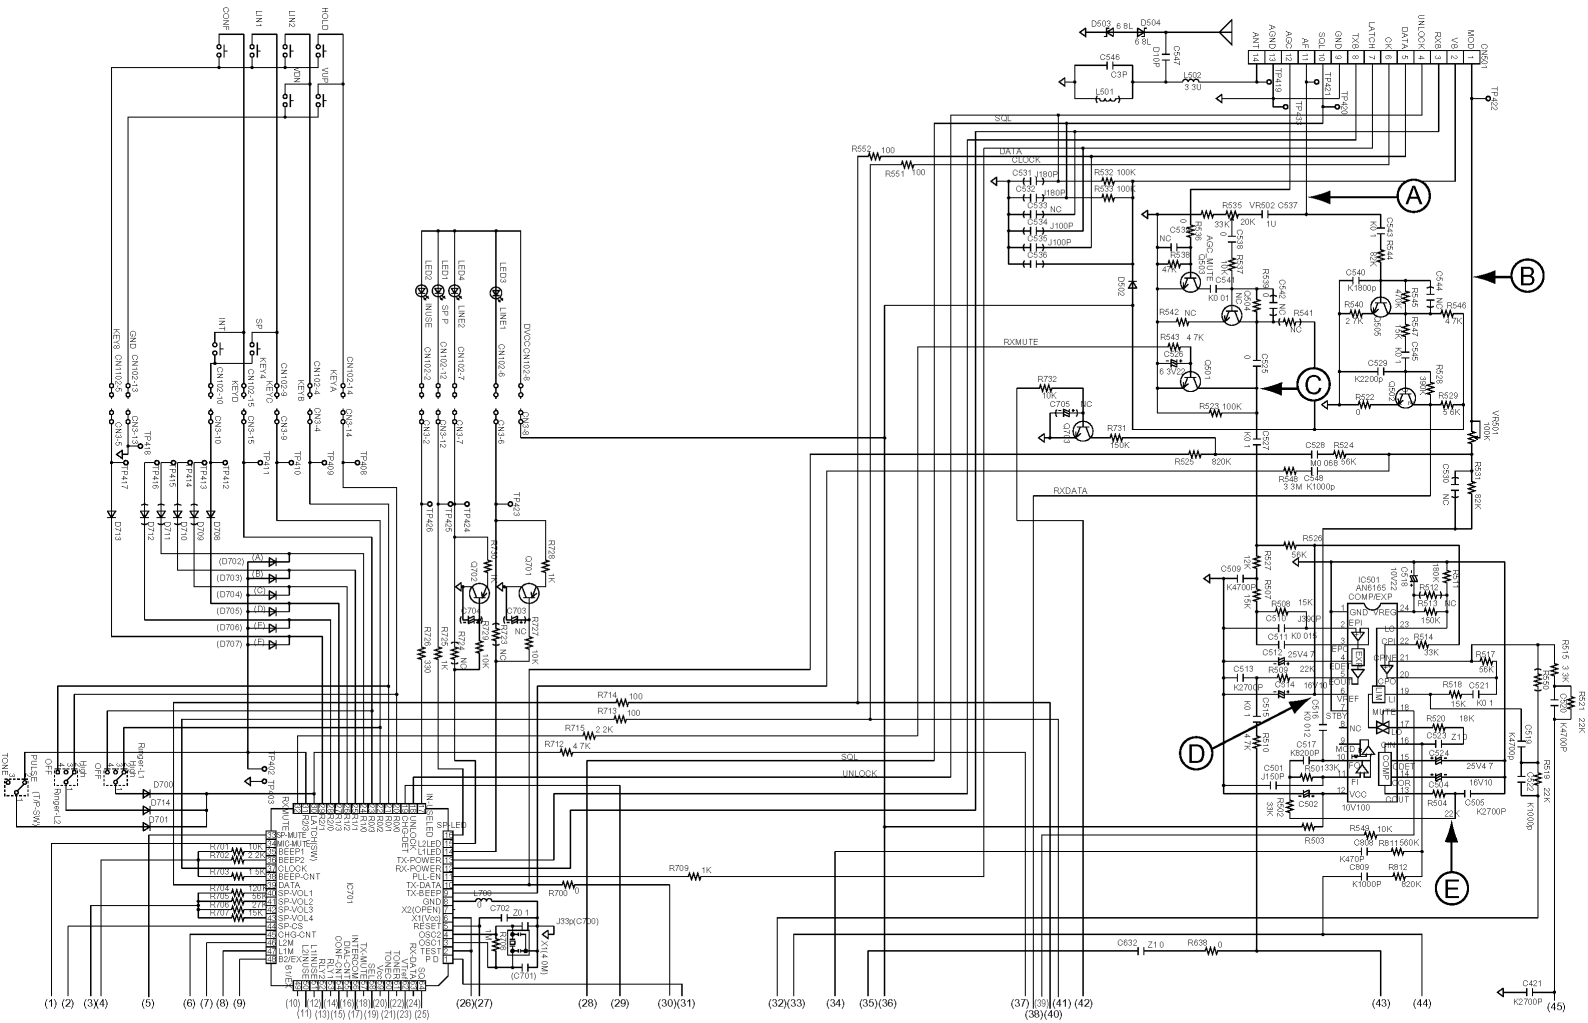


# Схема радиотелефона PANASONIC KX-TC993-B





**Notes:**


- |                                       |                                  |                                |  |
|---------------------------------------|----------------------------------|--------------------------------|--|
| 1. S302: Ringer Selector Switch       | 6. S515: Speakerphone Switch     | 11. S520: Volume (Up) Switch   | 15. S523: LINE2 Switch   |
| 2. S501~509, 511, 512: Dialing Switch | 7. S516: Locator/Intercom Switch | 12. S521: Volume (Down) Switch | 16. S522: HOLD Switch  |
| 3. S510: Tone Switch                  | 8. S517: Auto Switch             | 13. S525: CONF Switch          | 17. DC voltage measurements are taken with voltmeter from the negative voltage line. |
| 4. S513: Flash Switch                 | 9. S518: Program Switch          | 14. S524: LINE1 Switch         |  |
| 5. S514: Redial Switch                | 10. S519: Pause Switch           |                                |  |

**Important Safety Notice:**  
 Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

This schematic diagram may be modified at any time with the development of new technology.

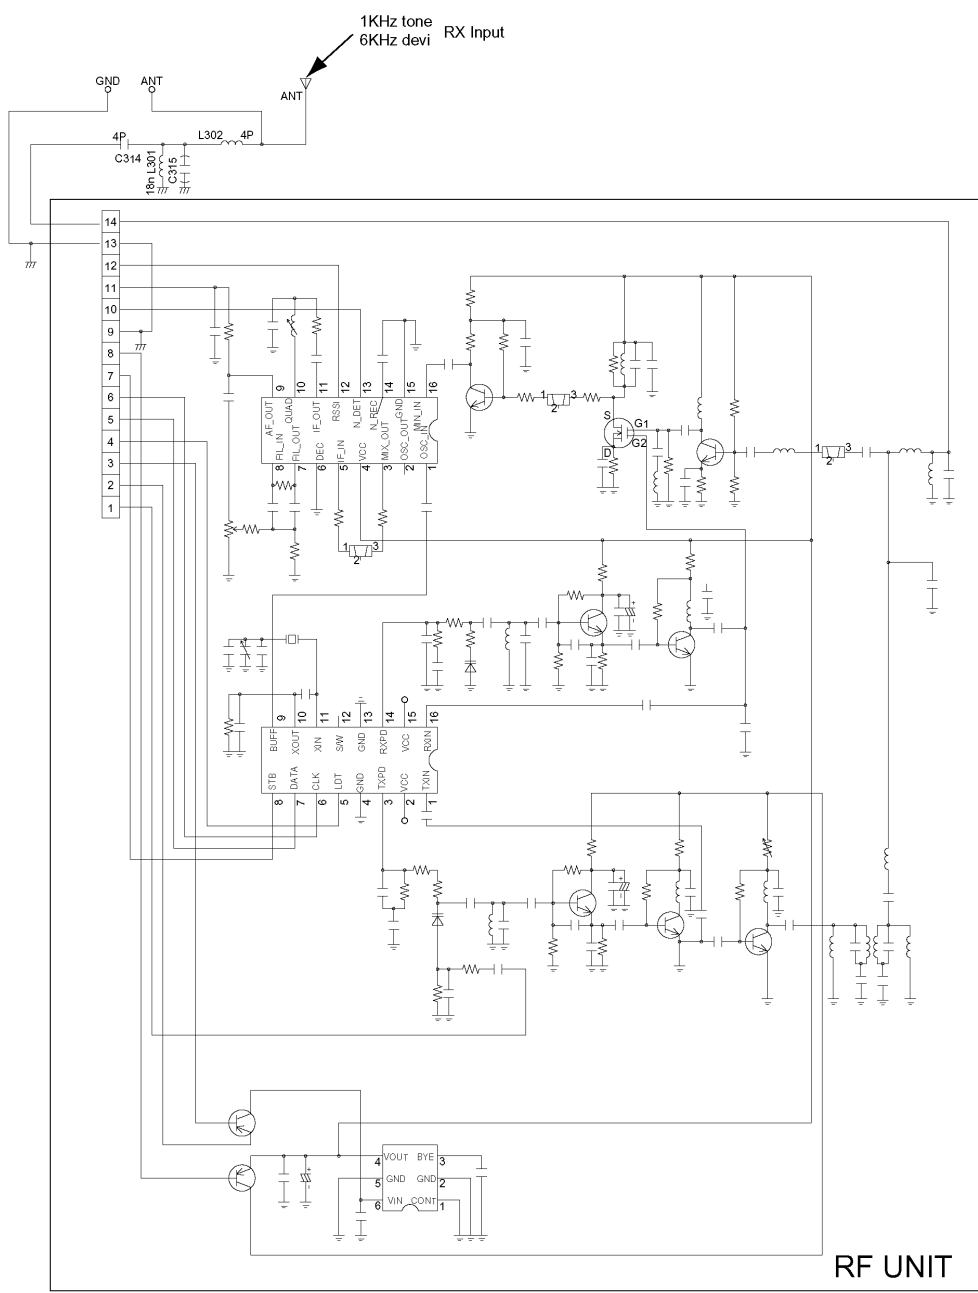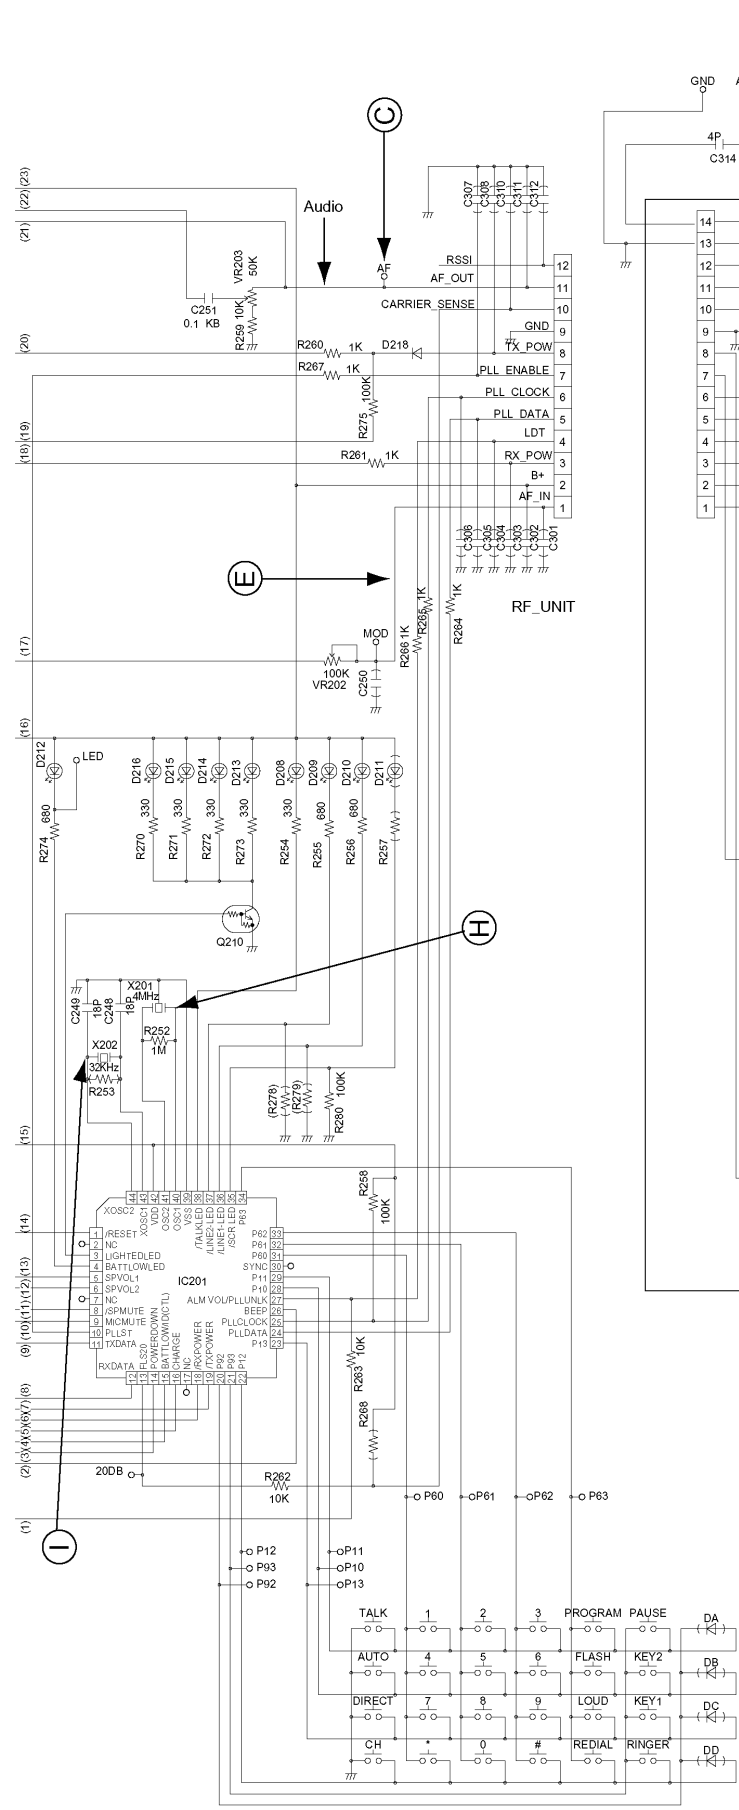

RF UNIT

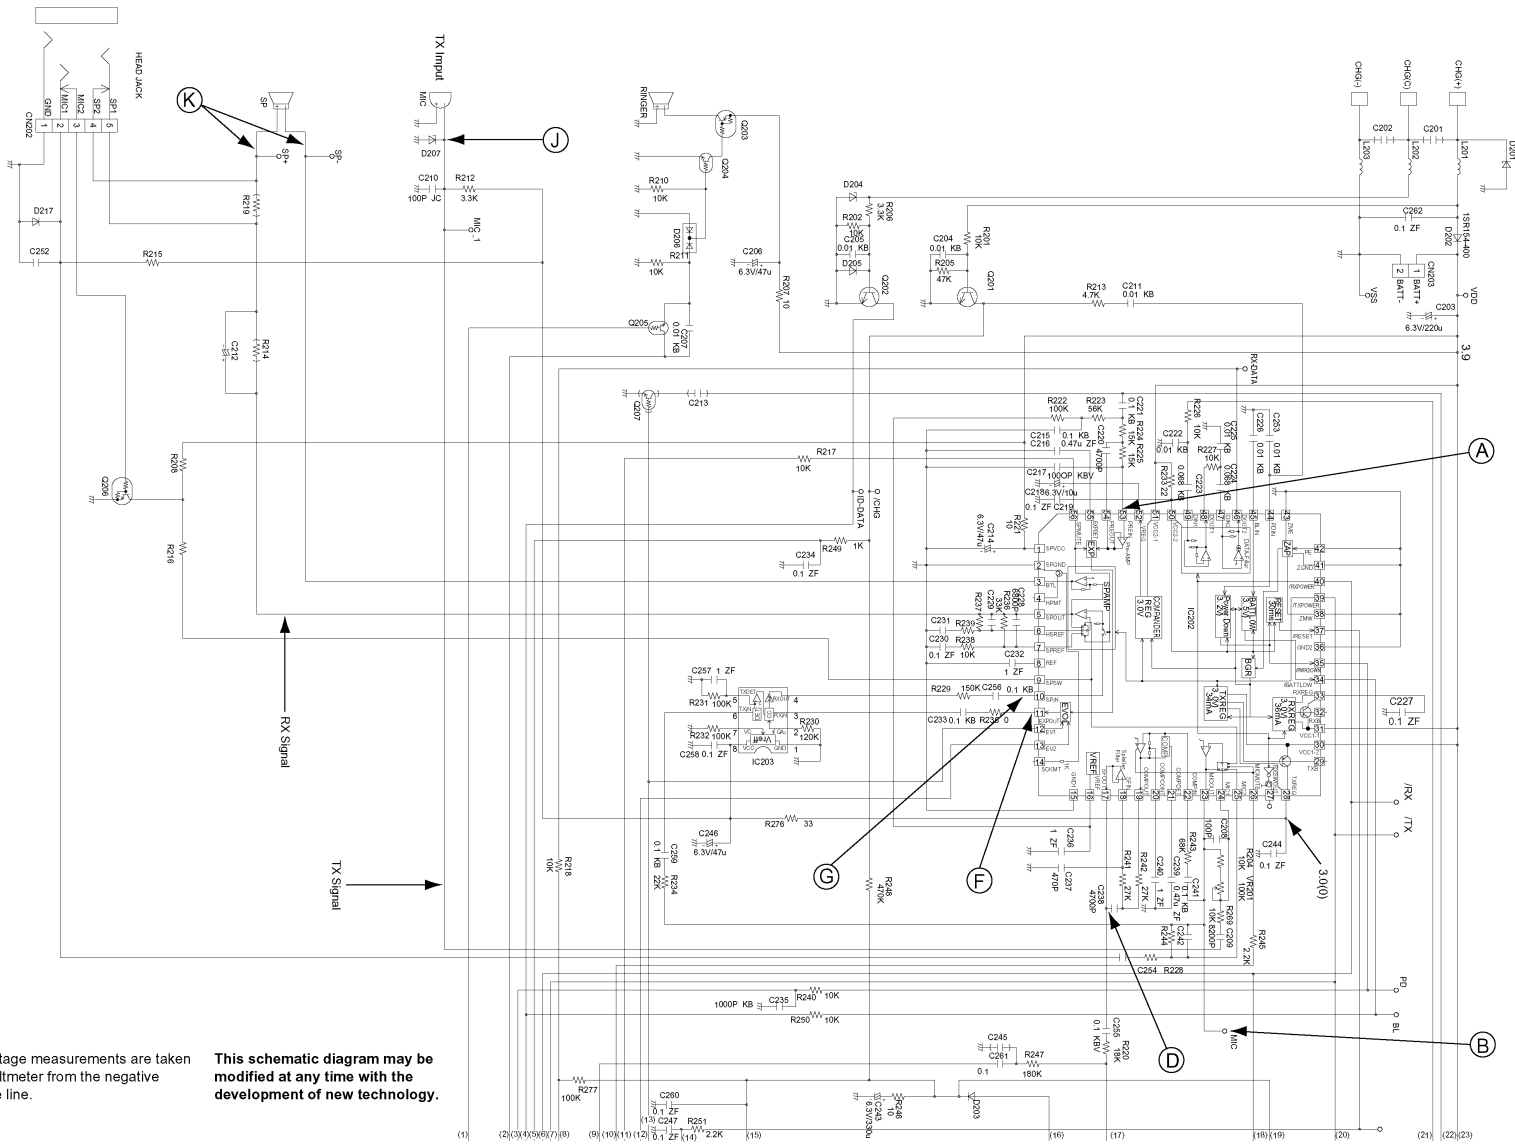

A


B

C

L

D

3.0(0)

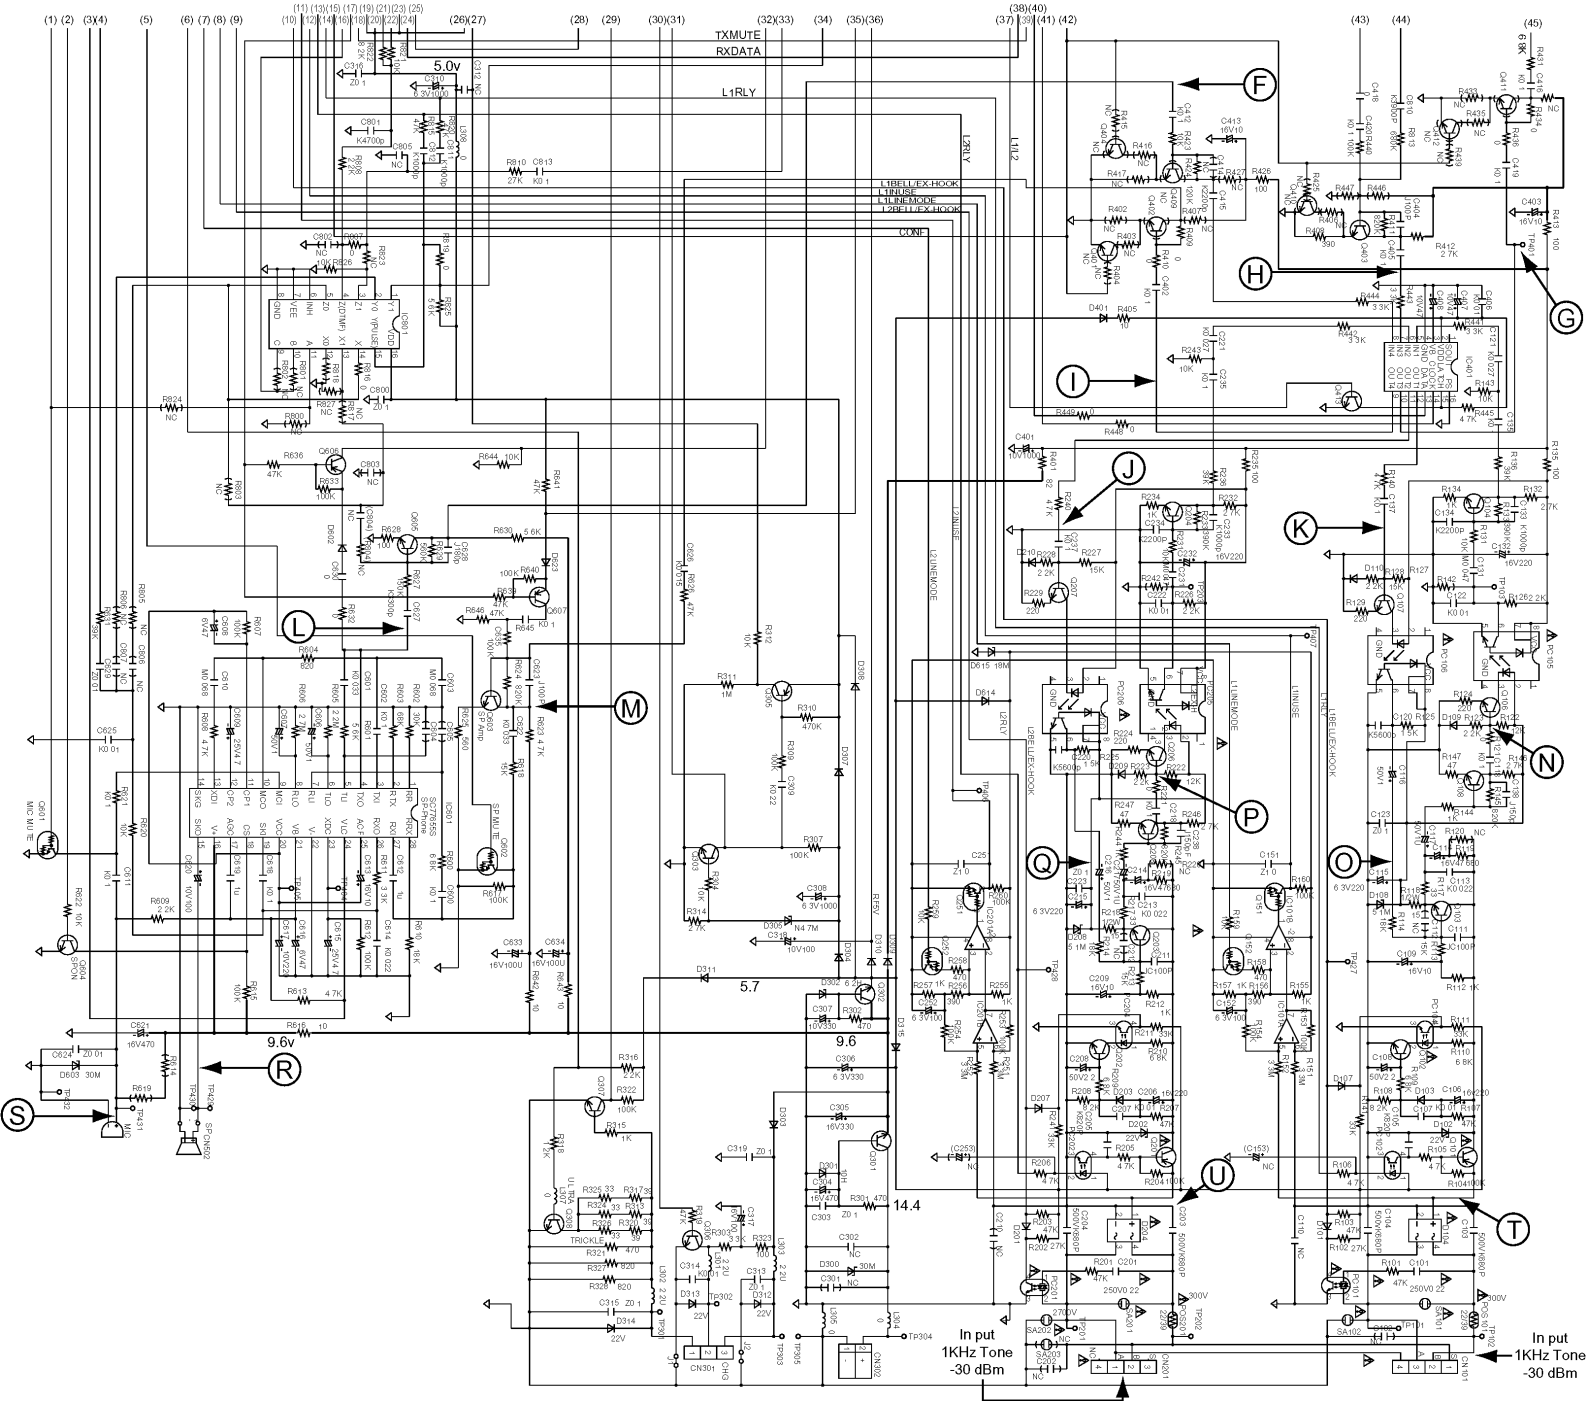

In put  
1KHz Tone  
-30 dBm

In put  
1KHz Tone  
-30 dBm